

FALCON WATERFREE URINALS

Cleaning and cartridge change instructions



CLEANING



1 Remove debris from bowl



2 Spray (mist) Falcon-recommended* cleaner onto bowl



3 Wipe clean and dry



Never dump cleaning solutions or other chemicals into bowl

When Should a Cartridge Be Changed?

Blue sealant appears around the diverter shield.



or

Fluid flows very slowly into the cartridge.

or

Fluid does not drain into the cartridge.

CARTRIDGE CHANGE



1 Verify contents of kit



2 Insert key into cartridge




3 Turn key to left to unlock



4 Lift cartridge and drain all free liquids



5 Place cartridge into disposal bag and dispose

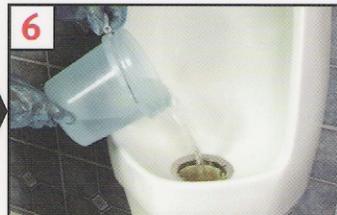

6 Flush housing with warm soapy water



7 Wipe clean inner stainless steel rim



8 Insert new cartridge into housing and turn key to right to lock



9 With diverter shield removed, fill cartridge with 1 quart or more of water until there are no air bubbles



10 Add blue sealant (allow time to drain into cartridge)



11 Spray (mist) Falcon-recommended* cleaner and wipe clean



12 Snap the diverter shield into place

*Falcon-recommended cleaners: <http://www.falconwaterfree.com/literature/>

Falcon Customer Experience Department: 866-975-0174 (toll free) • 616-954-3570 • Fax 616-954-3479 • service@falconwaterfree.com